

# Overview of the phone

## ① Display indicators

Signal strength and battery level.

## ② Soft keys

Press the soft key to call up the function that is displayed as **Text** or icon on the grey fields above the key.

## ③ Call key

Dial displayed phone number or name, accept calls. In standby mode: Display the last calls.

## ④ On/Off/End key


- Switched off: press and **hold** to switch on.
- During a conversation or in an application: press **briefly** to finish.
- In menus: press **briefly** to go back a level. Press and **hold** to return to standby mode.
- In standby mode: press and **hold** to switch off phone.

## ⑤ Control key

- In standby mode:**

- Open Phonebook.

- During conversation:**


- Start adjusting the volume then set volume with .

## ⑥ \* Press and hold

- In standby mode: switch on/off all signal tones (except alarm).
- For incoming calls: only switch off ring tones.

## ⑦ # Press and hold

In standby mode: switch key lock on/off.

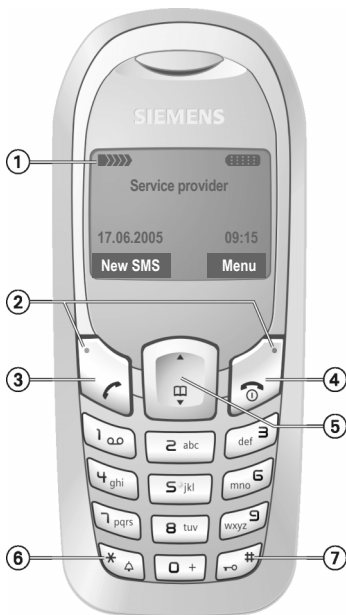


# Getting started


## Using the SIM card/battery

Your phone's display is delivered with a protective film. **Remove this film before getting started.** The service provider supplies you with a SIM card on which all the important data for your account is stored. If the SIM card is credit card-sized, snap out the smaller segment and trim any rough edges.


Remove the battery cover upwards ①.

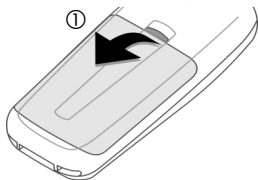

Insert SIM card ② and push it fully into the locating slot (make sure the angled corner is in the correct position ③). Then push the retaining catch over the top of the SIM card ④.

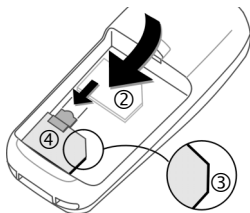


Insert the battery sideways into the phone ⑤, then press downwards ⑥ until it engages.

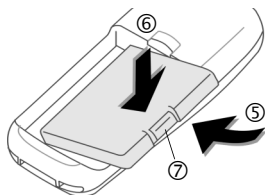

To remove, press the retaining tab ⑦ then lift the battery out.

Insert the battery cover by the tabs at the bottom ⑧, then press downwards ⑨, until it engages.

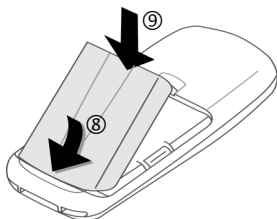


Always switch off phone before removing the battery!

Only 3V SIM cards are supported. Please contact your service provider if you have an older card.

## Charge battery

The battery is not fully charged when delivered. Plug in the charger cable at the bottom of the phone, plug in the power supply unit to the mains power socket and charge for at least **two hours**.

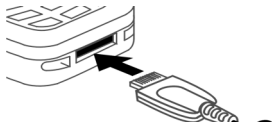


### Charging time

The charging time is 2 hours. Ambient temperature of 5 °C to 40 °C (icon flashes as a warning when 5 °C above/below this).

## Switch on/off, PIN entry

### Switch on/off

Press and **hold** On/Off/End key  to switch on or off.


### Enter PIN

The SIM card can be protected with a 4 - 8 digit PIN. Enter the PIN code using the number keys (the display shows a series of asterisks, if you make a mistake press **Clear**). Confirm your input with **OK**. Logging on to the network will take a few seconds.

First time switching on phone, the time and date must be set.

### Standby mode

When the name of the service provider/logo appears on the display, the phone is in **standby mode** and **ready for use**.

Press and **hold** the On/Off/End key  to return to standby mode from any menu option.

## Security

The phone and SIM card are protected against misuse by several security codes. Keep these confidential numbers in a safe place where you can access them again if required.

**Menu** → Setup → Security → Codes  
→ Select a function.

### PIN control

The PIN is usually requested each time the phone is switched on. You can deactivate this feature but you risk unauthorised use of the phone. Some service providers do not permit deactivation of the control.

### Change PIN

You can change the PIN to any 4 - 8 digit number you may find easier to remember.

### Change PIN2

(Displayed only if PIN 2 is available.)  
Proceed as with **Change PIN**.

### Change phonecode

You define and enter the phone code (4 - 8 digits) when calling a phone code protected function (e.g. **Direct call**, p. 4) for the first time. It is then valid for all protected functions. If it is entered incorrectly three times the phone is locked. Contact the Siemens Service.


### Clear SIM card barring

If the PIN is entered incorrectly three times, the SIM card is barred. Enter the PUK (MASTER PIN) provided by your service provider with the SIM card. If the PUK (MASTER PIN) has been lost, please contact your service provider.

### Prevent accidental activation


Even if PIN use is deactivated (p. 3) confirmation is required to switch on the phone.

This prevents accidental activation of the phone, e.g. when you are carrying it in a bag or when you are travelling in an aircraft.

After pressing and **holding** the On/Off/End key  select **OK** to switch on the phone or abort the operation with **Cancel**.

## Making a phone call



### Dialling with number keys

The phone must be switched on (standby mode). Enter the number (always with prefix, if necessary with the international dialling code). Press **Clear** to clear the last digit, press and **hold** to clear the entire phone number. To dial press the  key.


 

## End call

Press the End key  briefly. Press this key even if the person on the other end of the line has hung up first.


## Set volume

 Use the scroll key  to start adjusting the volume during conversation. Set volume with .


## Redial previous numbers

To redial the phone number last called, press the Call key  twice. To redial other numbers that were dialed previously, pick out the required phone number from the list with , then press  to dial.

## When a number is busy

For automatically dialling the phone number for up to 15 minutes at increasing intervals, press **Auto dial**. For phone ringing when the busy number is free, press **Call back** (). Press **Prompt** and a beep will remind you to redial the displayed phone number after 15 minutes.

## Accept call




The phone must be switched on (standby mode). An incoming call will interrupt any other use of the phone. Press **Answer** or .

If the phone number has been transmitted by the network, it is displayed. If the number and the name are stored in the Phonebook, the corresponding name is displayed instead. If set, an animation can be displayed instead of the bell icon.

## Reject call

**Reject** or  press briefly.

## Held call


Make a new connection during a call with  **menu** → **Hold** →  (dial new phone number, also from Phonebook: ). With **Swap** you can swap back and forth between both calls.


Additional costs will be incurred for the 2nd phone connection.

## Conference



Make a new connection during a call with  **menu** → **Hold** →  (dial a new phone number).

With  **menu** → **Conference** you can join the held call. Repeat this procedure until all participants are linked together (up to 5 participants).

All calls in the conference are ended simultaneously when the End key  is pressed.

**Additional costs will be incurred for every additional phone connection.**

## Call menu

Several functions are only available during a call:

 **menu** → Select a function.

## Direct call

The phone can be locked, so it's only possible to dial a defined number.

## Switch on

**Menu** → **Setup** → **Security** → **Direct call**

Press **Select** and enter phone code. When first prompted you define and enter the phone code (4 - 8 digits). **Please do not forget this code!** Confirm input with **OK** and press **Change**. Select phone number from the Phonebook (p. 5) or enter a new one. With **OK** confirm On.

## Use

Press and hold the **right** soft key  to dial.

## Switch off

Press and hold **#** and enter phone code. Confirm input with **OK** and press **Change**. With **OK** confirm Off.

# Phonebook

## New entry

Open Phonebook (in standby mode)

 (select <New entry>) → **Select**

→ Activate input fields.

**Number:** Always enter phone number with an area dialling code.

**Name:** Enter first name or surname.

**Group:** Organise entries in groups, select with **Change**.

**Location:** Select location: **SIM**, **Mobile** or **Protected SIM**.

**Record no.:** This is automatically assigned to the entry. Change with **Change**.

Press **Save** to store the new entry.

## Text entry

Press number key repeatedly until the required letter appears. The cursor advances after a short delay. Example:

**2** Press **once** for **a**, twice for **b** etc. Press and **hold** to write the number.

**Ä, ä, 1–9** Umlauts and numbers are displayed after the relevant letters.

**Clear** Press **briefly** to delete the letter before the cursor, press and **hold** to delete the whole word.

 Move the cursor (forwards/back).

**#** Press **briefly**: Switch between: **abc**, **Abc**, **T9abc**, **T9Abc**, **123**. Status indicator in the top line of the display.

**\*** Press **briefly**: Select special characters. Press and **hold**: Open input menu.

**0** Press **once/repeatedly**: **. , ? ! ' " 0 - ( ) @ / : \_**  
Press and **hold**: Writes **0**.



**1** Writes blank. Press **twice** = skip line.

## Call/search for an entry

Open Phonebook , select name by typing first letter or scroll and dial with .


## Call with record no.

A record number is automatically assigned to every new entry in the Phonebook.

 Enter record number (in standby mode) → **#** → 

## Edit entry

 → Select entry → **Options** → **Edit**

→  (select required input field)

→ Make changes → **Save**

## Location:


An entry can be moved to different storage locations in the Phonebook.

**SIM (standard)** 

Entries that are stored in the Phonebook on the SIM card can also be used on a different GSM phone.

**Mobile** 

Phonebook entries are stored in the memory of the mobile phone when the memory of the SIM card is full.

**Protected SIM** 

Phone numbers can be stored in protected locations on a special SIM card. A PIN 2 is needed for editing (p. 3).


## Groups

If there are many Phonebook entries it is best to assign them to a group, e.g.: **Family**, **Friends**, **VIP**, **Others**

A special ring tone can sound and/or a symbol can be displayed if the phone number of a call is registered in a group.

## Select a group

**Menu** → **Phonebook** → **<Groups>**

→  (select a group) → **View**

All entries of the selected group are displayed.

## Change group assignment

You can assign a Phonebook entry to a group when you enter it (p. 5).

⬇ → Select entry → **View** → **Edit**  
 → ⬆ (scroll to group) → **Change**  
 → Select a new group → **Save**

## SMS to group

A memo (SMS) can be sent as a "circular" to all members of a group. Each SMS is charged separately!

Open <Groups> in Phonebook menu and scroll to a group.

**Options** → **SMS to group** → **Select**  
 → Compose message → ⤴ (the group is displayed) → **OK** → ⤴

The SMS is sent to the first recipient. Press ⤴ again to start the next send operation. Each send operation must be confirmed. Individual recipients may be skipped.

## Call to group



You can call up to 5 group members one by one and link them together in a conference (function may need to be enabled by the service provider).

Open <Groups> in Phonebook menu and scroll to a group.

**Select** → Select the entries → **Change**  
 (mark/unmark entry) → **OK**

The first entry is dialled and the call is put on hold. Proceed ⤴ by calling the next entry until all marked entries are called. With **Options** you can link the calls on hold in a conference.

## Group call tones

You can assign different ringtones to groups.

**Menu** → **Ring tones** → **Group tones**  
 → Select a group → **Select**  
 → Select ring tone → **Select**

# Messages (SMS)

## Read messages

A new message is indicated on the display with . Press the control key on the left to read the message. Scroll through the message line by line with ⬆.

## Reply menu

**Reply** Open the reply menu.

## Inbox/Sent

**Menu** → **Messages** → **Inbox or Sent**

The list of saved messages is shown.

## Compose a message

**Menu** → **Messages** → **New SMS**

→ Write text → ⤴  
 → / (enter phone number or select from Phonebook) → **OK**

The SMS is sent to the service centre for transmission.

## Text menu

**Options** Open the text menu.

## Write text fragments

**Menu** → **Messages**  
 → **Predef. texts** → <New entry>  
 → (write text fragment)  
 → **Save**

## Use text fragments

(write message text) → **Options**  
 → **Insert text** → ⬆ (select text fragment from the list) → **Select**

The text fragment is inserted into the text to the left of the cursor.

## Text entry with T9

T9 deduces the correct word from the individual key entries by making comparisons with an extensive dictionary. Write a word and finish it without looking at the display. Simply press the keys where the relevant letter is located once. If several

options are found in the dictionary the most probably is displayed first. For further options please press the right softkey.

T9® Text Input is licensed under one or more of the following:  
 U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480, 5,945,928 and 6,011,554;  
 Canadian Pat. No. 1,331,057;  
 United Kingdom Pat. No. 2238414B;  
 Hong Kong Standard Pat. No. HK0940329;  
 Republic of Singapore Pat. No. 51383;  
 Euro.Pat. No. 0 842 463 (96927260.8)  
 DE/DK, FI, FR, IT, NL, PT, ES, SE, GB;  
 and additional patents are pending worldwide.

## Setup

**Menu** → **Setup** → Select a function.

### Profiles

Three profiles are standard with default settings, they can be changed however: **Normal envi.**, **Quiet environ.**, **Noisy environ.**

You can set two personal profiles (<No Title>).

The special profile **Aircraft mode** cannot be changed.

### Activate

Select default profile or personal profile → **Select**.

### Change sett.

Select profile → **Options** → **Change sett.**

The list of available functions is displayed.

### Aircraft mode

The phone will automatically switch off if you select this profile. Even the alarm tone is deactivated. An alarm is only shown on the display. It is not possible to modify this profile.


### Normal operation

The next time you switch on the phone and return to normal operation the default profile will be activated.

## Display

### Language

Set the language of the display text. "Automatic" will set the language of your home service provider. Reset to this language in standby status:

\*#0000# 

### Screensaver

The screensaver shows a picture on the display as soon as a period that can be set by you has elapsed. The function is ended by an incoming call or by pressing any key.

### Call setup

#### Hide ID



When switched off, the display of the calling party shows your phone number (dependent on service provider). To suppress this display, you can activate the "Hide ID" mode.

#### Call waiting



If you are registered for this service, you can check whether it is set and you can activate/deactivate it with **Call waiting**.

#### Minute beep

During the call, you will hear a beep after each minute as a reminder of the time elapsed.


#### Divert

You can set the conditions for which calls are diverted to your mailbox or other numbers.

#### Set up call divert (example)

##### All calls



All calls are diverted.  is shown in the top line of the display in standby mode.

##### Unanswered calls



Includes **Unanswered**, **Not reachable**, **No reply**, **Busy**.

**Select** → **Set** →  (Enter the phone number to which the call should be diverted) → **OK**

After a short pause, the setting is confirmed by the network.

### Status check

After a short pause the current information is shown.



Condition set.

Not set.



Display, if status is unknown (e.g. on a new SIM card).

### Clear all

All set diversions are cleared.



### Clock

**Menu** → Setup → Clock

→ Select a function.

### Security

**Menu** → Setup → Security

→ Select a function.

### Auto key lock

The keypad is locked automatically if no key has been pressed for one minute in standby mode. This prevents the phone from being used accidentally. However, you can still be called and you can still make an emergency call.

### Direct call

Only **one** phone number can be dialled. Press and **hold** control key **on the right** (p. 4).

### This SIM only

Your phone is prevented from being used with a **different** SIM card.



### Barrings

Network barring restricts the use of your SIM card.



**All calls out:** All outgoing calls except emergency numbers are barred.

**Outgo internat:** Only national calls can be made.

**Out.int.x home:** International calls are not permitted, except for calls to your home country.

**All calls in:** The phone is blocked from receiving all incoming calls.

**When roaming:** You do not receive any calls outside your home network.

**Status check:** Query the status of your barrings.

**Clear all:** Clear all barrings. Password protected!

### Phone identity

The phone identity number (IMEI) is displayed.

### Master reset

The phone is reset to the default values (does not apply to SIM card and network settings).

Alternative input in standby mode:

\*#9999#

### Network

**Menu** → Setup → Network

→ Select a function.

### Network info

The list of GSM networks currently available is displayed.

### Auto network selection

If activated, the next network is dialled in the order of your "preferred networks".

### Choose network

The network search is restarted.

### Pref. network

Set the service providers you prefer when you leave your home network.

### Fast search

Speed up network reconnection.



## Ring tones

**Menu** → **Ring tones** → Select a function.


Set the tones to match your needs.

### Ringer setting

Activate/deactivate the ring tone or reduce it to a short beep.

### Volume

Set the same volume for all ring tones.

 Set volume.

**OK** Confirm.

 **Call tone, Group tones, Other tone,**

### Alarm tone, Message tone

The ring tones for the stated types of call/functions can be set separately.

## More tones...

### Call screening



Only calls from numbers that are in the Phonebook or in a predefined group are signalled audibly or by silent alert. Other calls are only displayed.

### Key tones

Set acoustic key acknowledge:

**Click or Tone or Silent**

### Minute beep

During the call, you will hear a beep once a minute as a reminder.

### Info tones

Set service and alarm tones.

## Alarm clock

### Activate/deactivate

**Menu** → **Alarm clock**

The alarm will ring at the time set by you, even when the phone is switched off.

**On/Off** Activate/deactivate the alarm.

### Setting


Set time for alarm call (hh:mm), then **OK**.

## Fast access key

### Left soft key

You can assign an important phone number or function to the left soft key. For example, **Games** is assigned to the softkey. To change this (in standby mode):

**Games** Press **briefly** → **Change**

→  scroll to the application or **Phone number** (select a name from the **Phonebook**) → **Select** Confirm.



Apply (in standby mode) e.g.:

**Games** Press and **hold**.

### Speed dialling keys (2 to 9)

You can assign a phone number or function to each of the keys from 2 to 9 (speed dialling numbers). Number key 1 is reserved for the mailbox.

### Set (in standby mode)

 (Key 2-9) →  scroll to the application or **Phone number** (select a name from the **Phonebook**) → **Select** Confirm.

**Apply (in standby mode) e.g.:**

**2** Press and **hold**.

# Customer Care

We offer fast, individual advice! You have several options:

Our online support on the Internet:

**www.siemens.com/  
mobilephonescustomer care**

We can be reached any time, any place. You are given 24 hour support on all aspects of our products. Here you will find an interactive fault-finding system, a compilation of the most frequently asked questions and answers, plus user guides and current software updates to download.

When calling customer service, please have ready your receipt and the phone identity number (IMEI, to display press \*#06#), the software version (to display, press \*#06#, then **Info**) and if available, your Siemens Service customer number.

In some countries repair and replace services are impossible where the products are not sold through our authorised dealers.

If repair work is necessary, please contact one of our service centres:

Abu Dhabi .....	0 26 42 38 00
Argentina .....	0 80 08 88 98 78
Australia .....	13 00 66 53 66
Austria .....	05 17 07 50 04
Bahrain .....	40 42 34
Bangladesh .....	0 17 52 74 47
Belgium .....	0 78 15 22 21
Bolivia .....	0 21 21 41 14
Bosnia Herzegovina .....	0 33 27 66 49
Brunei .....	02 43 08 01
Bulgaria .....	02 73 94 88
Cambodia .....	12 80 05 00
Canada .....	1 88 87 77 02 11
Chile .....	8 00 53 06 62
China .....	021 2301 7188
Colombia .....	01 80 07 00 66 24
Croatia .....	0 16 10 53 81
Czech Republic .....	2 33 03 27 27
Denmark .....	35 25 86 00
Dubai .....	0 43 96 64 33
Ecuador .....	18 00 10 10 00
Egypt .....	0 23 33 41 11

Estonia .....	6 30 47 97
Finland .....	09 22 94 37 00
France .....	01 56 38 42 00
Germany .....	0 90 01 00 77 00
Greece .....	80 11 11 11 16
Hong Kong .....	28 61 11 18
Hungary .....	06 14 71 24 44
Iceland .....	5 11 30 00
India .....	22 24 98 70 00 Extn: 70 40
Indonesia .....	0 21 46 82 60 81
Ireland .....	18 50 77 72 77
Italy .....	02 24 36 44 00
Ivory Coast .....	05 02 02 59
Jordan .....	0 64 39 86 42
Kenya .....	2 72 37 17
Kuwait .....	2 45 41 78
Latvia .....	7 50 11 18
Lebanon .....	01 44 30 43
Libya .....	02 13 50 28 82
Lithuania .....	8 70 07 07 00
Luxembourg .....	43 84 33 99
Macedonia .....	02 13 14 84
Malaysia .....	+ 6 03 77 12 43 04
Malta .....	+ 35 32 14 94 06 32
Mauritius .....	2 11 62 13
Mexico .....	01 80 07 11 00 03
Morocco .....	22 66 92 09
Netherlands .....	0 90 03 33 31 00
New Zealand .....	08 00 27 43 63
Nigeria .....	0 14 50 05 00
Norway .....	22 70 84 00
Oman .....	79 10 12
Pakistan .....	02 15 66 22 00
Paraguay .....	8 00 10 20 04
Peru .....	0 80 05 24 00
Philippines .....	0 27 57 11 18
Poland .....	08 01 30 00 30
Portugal .....	8 08 20 15 21
Qatar .....	04 32 20 10
Romania .....	02 12 09 99 66
Russia .....	8 80 02 00 10 10
Saudi Arabia .....	0 22 26 00 43
Serbia .....	01 13 07 00 80
Singapore .....	62 27 11 18
Slovak Republic .....	02 59 68 22 66

Slovenia .....	0 14 74 63 36
South Africa .....	08 60 10 11 57
Spain .....	9 02 11 50 61
Sweden .....	0 87 50 99 11
Switzerland .....	08 48 21 20 00
Taiwan .....	02 23 96 10 06
Thailand .....	0 27 22 11 18
Tunisia .....	71 86 19 02
Turkey .....	0 21 64 59 98 98
Ukraine .....	8 80 05 01 00 00
United Arab Emirates .....	0 43 66 03 86
United Kingdom .....	0 87 05 33 44 11
USA .....	1 88 87 77 02 11
Venezuela .....	0 80 01 00 56 66
Vietnam .....	84 89 20 24 64
Zimbabwe .....	04 36 94 24

## Product data

### Declaration of conformity

Siemens Information and Communication mobile hereby declares that the phone described in this user guide is in compliance with the essential requirements and other relevant provisions of European Directive 1999/5/EC (R&TTE).

The declaration of conformity (DoC) concerned has been signed. Please call the company hotline if you require a copy of the original, or go to:

[www.siemens.com/mobiledocs](http://www.siemens.com/mobiledocs)

CE 0682

## Technical data

GSM class:	4 (2 watt)
Frequency range:	880–960 MHz
GSM class:	1 (1 watt)
Frequency range:	1.710–1.880 MHz
Weight:	78 g
Dimensions:	101 × 45 × 20 mm
Li-Ion battery:	650 mAh
Operating temperature:	–10 °C to 55 °C
Standby time:	60 h - 230 h
Talk time:	90 min - 250 min
SIM card:	3.0 V

## Battery quality statement

The capacity of your mobile phone battery will reduce each time it is charged/emptied. Storage at too high or low temperatures will also result in a gradual capacity loss. As a result the operating time of your mobile phone may be considerably reduced, even after a full recharge of the battery.

Regardless of this, the battery has been designed and manufactured so that it can be recharged and used for six months after the purchase of your mobile phone. After six months, if the battery is clearly suffering from loss of performance, we recommend that you replace it. Please buy only Siemens original batteries.

## Care and maintenance

Your phone has been designed and manufactured to the highest of standards and should be treated with great care. The suggestions below will help you to enjoy your phone for many years.

- Protect your phone from moisture and humidity! Precipitation, humidity and liquids contain minerals that will corrode electronic circuits. Nevertheless, should your phone become wet, disconnect it immediately from the power supply to avoid electric shock. Do not place your phone (even to dry it) on/in a source of heat such as a microwave oven, oven or radiator. The phone may become overheated and possibly explode.
- Do not use or store the phone in dusty, dirty areas. Its moving parts may become damaged and the casing may become deformed and discoloured.
- Do not store your phone in hot environments (e.g. vehicle instrument panel in the summer). High temperatures can shorten the life of electronic devices, damage batteries and warp or melt certain plastics.
- Do not store your phone in cold environments. When the phone warms up again (to its normal ambient temperature), moisture can form inside the phone, which may damage electronic circuit boards.
- Do not drop, knock or shake your phone. Rough handling can damage internal circuit boards!
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone!

The suggestions given above apply equally to your phone, battery, charger and all accessories. If any of these parts is not working properly, obtain fast and reliable help at our service centres (p. 10).

## SAR

### European Union (RTTE) and international (ICNIRP)

INFORMATION ON RF EXPOSURE / SPECIFIC ABSORPTION RATE (SAR)

THIS MODEL MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and was adopted into the European Standard EN 50360 and into other national standards. The CE mark demonstrates that the EU requirements are met.

The highest SAR value for this device when tested at the ear was **0.42 W/kg<sup>1</sup>**. As mobile devices offer a range of functions, they can be used in positions other than the head, such as directly on the body. In this case, the limits are met too.

As SAR is measured utilizing the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you nevertheless want to reduce your exposure then you can do so by limiting the length of calls or using a 'hands-free' device to keep the mobile phone away from the head and body.

Additional Information can be found on the websites of the World Health Organization ([www.who.int/emf](http://www.who.int/emf)) or Siemens ([www.siemens.com/mobilephones](http://www.siemens.com/mobilephones)).

<sup>1</sup> The tests are carried out in accordance with international guidelines for testing.

# Accessories

Available Accessories are:

## Fashion & Carry

Tour Case FCT-650

Belt Case FCL-600

## Energy

Li-Ion Battery EBA-510

Travel Charger EU ETC-500

Travel Charger UK ETC-510

Car Charger Plus ECC-600

Desk Top Stand EDS-600

## Handsfree Portable

Headset Basic HHS-500

Headset HHS-510

Headset Purestyle HHS-610

## Car Solutions

Car Kit Portable HKP-500

Car Kit Easy HKP-700

Car Kit Easy Upgrade HKO-700

Products can be obtained in specialist shops or you can visit the Siemens Mobile Store online:

 The logo consists of the word "SIEMENS" in a bold, sans-serif font, with "Original Accessories" in a smaller font below it, all enclosed in a rectangular border.	<p>Siemens Original Accessories <a href="http://www.siemens.com/shop">www.siemens.com/shop</a></p>
--	--





# Safety precautions

## Information for parents

Please read the operating instructions and safety precautions carefully before use.  
Explain the content and the hazards associated with using the phone to your children.



Remember to comply with legal requirements and local restrictions when using the phone. For example in aeroplanes, petrol stations, hospitals or while driving.



Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. Keep at least 20 cm/9 inches between phone and pacemaker. When using the mobile phone hold it to the ear which is further away from the pacemaker. For more information consult your doctor.



Small parts such as the SIM card, sealing stop, lens ring and lens cap can be dismantled and swallowed by small children. The phone must therefore be stored out of the reach of small children.



The mains voltage specified on the power supply unit (V) must not be exceeded. Otherwise the charging device may be destroyed. The power supply must be plugged into an easily accessible AC mains power socket when charging the battery. The only way to turn off the charging device after charging the battery is to unplug it.



Only use original Siemens batteries (100 % mercury-free) and – charging devices. Otherwise you risk serious damage to health and property. The battery could ex-



The ringtone, info tones and handsfree talking are reproduced through the loudspeaker. Do not hold the phone to your ear when it rings or when you have switched on the handsfree function. Otherwise you risk serious permanent damage to your hearing.



Do not place the phone near to electromagnetic data carriers such as credit cards and floppy disks. Information stored on them could be lost.



You may only open the phone to replace the battery (100 % mercury-free), or SIM card. You must not open the battery under any circumstances. All other changes to this device are strictly prohibited and will invalidate the guarantee.



Please turn off your phone in open spaces in storms.

## Important



Please dispose of unwanted batteries and phones as permitted by the laws in your country.



The phone may cause interference in the vicinity of TV sets, radios and PCs.



Use only Siemens original accessories. This will avoid potential risks to health or property and ensure compliance with all relevant regulations.

Ref.No.: A31008-H2770-M7-3-RC19



\* A 5 B 0 0 0 7 5 6 1 2 5 3 0 \*

Improper use will invalidate the guarantee!  
These safety instructions also apply to Siemens original accessories.